

一分钟玩转 Paperlike HD

 


【配件说明】

- DASUNG 定制 “Y” 形 HDMI 数据与供电二合一线缆（用于电脑与 Paperlike HD 连接）

【连接设备】

首先，请确保您的电脑有 HDMI 接口，否则需要使用转换器（参见特别提示 1、2）。然后，用 “Y” 形 HDMI 线缆将电脑与 Paperlike HD 连接（如图示）。电脑端需同时连接 HDMI（数据传输）和 USB（供电），Paperlike HD 端连接 Mini-HDMI。您也可以单独将 USB 接头连接到 USB 充电器上用于供电（参见特别提示 3）。

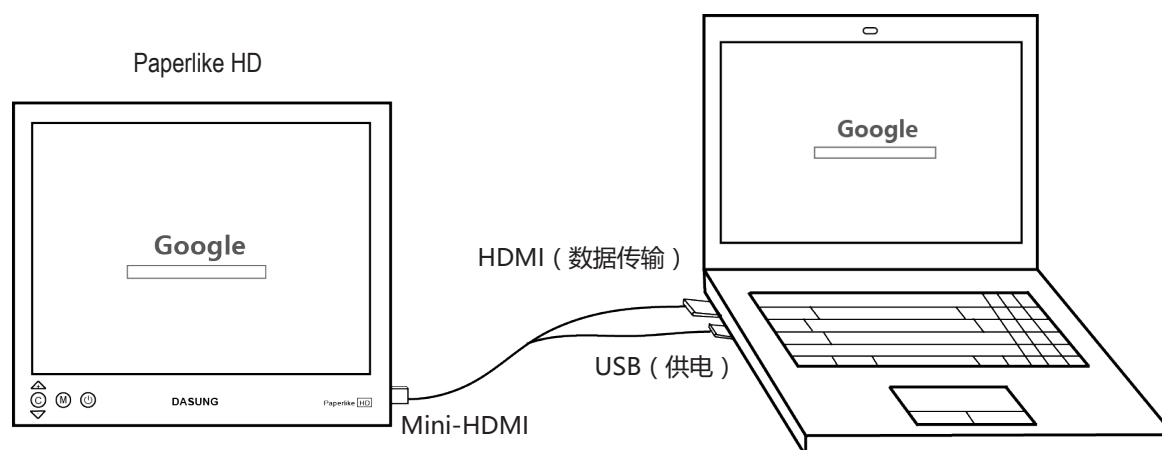






“Y” 形 HDMI 线缆连接后，Paperlike HD 即可显示画面，无需按 “” 电源键。

【软件安装】

在没有使用 Paperlike HD 增强软件的情况下，Paperlike HD 默认使用 Floyd 画质模式，并且每分钟会弹出安装软件的提示。如果您想使用更多画质模式、对比度调整、屏幕无操作保护等增强功能，请务必安装 Paperlike HD 软件。

- 前往大上科技官网(www.dasung.com)下载中心，下载 Paperlike HD 软件。选择与您电脑操作系统对应的文件夹，进行软件安装。
- 软件安装成功后，双击桌面的 “ Paperlike HD ” 图标运行软件，即可使用各种增强功能。

【使用技巧】

- 1、推荐设置：使用默认的 Floyd 画质模式，2200*1650 分辨率，系统缩放建议为 175%。或者选用 1100*825 分辨率的 A5 画质模式。
- 2、灵活调整 Paperlike HD 增强软件中的 “对比度”，按需设置，能使 Paperlike HD 满足几乎所有办公学习需要。例如，看文本时可调整为 “较深”；看图片时可调整为 “较浅”。
- 3、电子墨水显示原理特殊，残影不可避免，按 Paperlike HD 左下角  按钮可一键清除残影。
- 4、按下  /  按钮，可调整对比度，满足各种画面显示需求。
- 5、可在 Paperlike HD 增强软件中设置键盘快捷键，快捷清除残影。
- 6、关闭电脑操作系统中的渲染效果，或将相关背景画面设置成纯白色，有助于减轻残影。
- 7、当 Paperlike HD 无响应时，可同时按左下角的  +  按钮，重启显示器。

【特别提示】

- 1、VGA 接口输出的是模拟信号，效果不如 HDMI 高清数字信号，即便转接也不可用。建议您选用 HDMI 接口的电脑。
- 2、DVI/miniDP/DP/Thunderbolt 接口的电脑，请自配相应接口转 HDMI 母座转接头。
- 3、部分 PC 端的 USB 可能供电不足，导致 Paperlike HD 死机，此时需要重启，并外配 5V-2A 的电源适配器，以保证工作稳定！
- 4、如您在使用过程中遇到问题，请查阅完整版说明书，或直接致电：010-69908008，邮箱：support@dasung.com

 
Quick start

【Accessories Description】

- Two special mini-HDMI to HDMI and USB cables. One for backup.
- A USB to USB cable for firmware upgrade in some emergency (non standard).

【How to Connect】


1. Make sure your PC has a full-HDMI port. Otherwise you will need to use an adaptor (See Note 1 & 2).
2. Use the Y-shaped HDMI cable to connect PC with Paperlike HD. Connect Mini-HDMI to Paperlike HD. HDMI cable(for data) and USB cable(for power) should be connected with PC at the same time. Paperlike HD connect Mini-HDMI. You also can connect the USB cable to USB charger (See Note4).

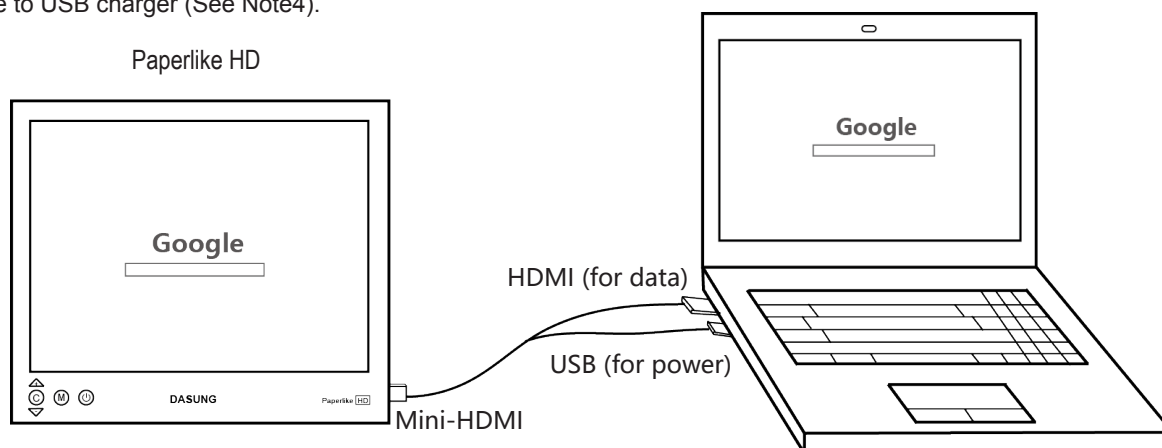


 



After the Y-shaped HDMI cable is connected, Paperlike HD will display the screen image. No need to click "  " button.

【Install Software】

You can use Paperlike HD without using the software. But we STRONGLY recommend you use the software for more functions. Such as: Protect the screen better / Use more image modes / Condition the contrast for various applications.

- Visit website(www.dasung.com), install Paperlike HD's software.
- After the software is installed, double-click the desktop " Paperlike HD" icon to run the software, you can use a variety of enhancements.

【Skills】

1. Recommended setting: Default Floyd image mode, 2200*1650 resolution, zoom at 175%. Or 1100*825 resolution, A5 image mode.
2. Flexible adjustment of Paperlike HD software "contrast", setting as required. It can let Paperlike HD to meet almost all office and school needs. For example, use darker contrast for documents and lighter contrast for images.
3. E-ink displays principle is special. The ghost is inevitable. You can click Paperlike HD's lower left  button to remove the ghost easily.
4. Click  /  button , you can adjust the contrast.
5. Use the hot-key to remove the ghost. The hot-key can be set in the software.
6. Use white desktop background and close the render effects can reduce the ghost.
7. If Paperlike HD has no response, you can press the  +  buttons to restart the Paperlike HD.

【Note】

1. VGA Port is not compatible. The video signal may be terrible from the VGA adaptor. It cannot support Paperlike HD software either. We recommend you to choose a PC with HDMI or other digital video ports.
2. For the computer with DVI/miniDP/DP/Thunderbolt interface, you can use the HDMI adapter.
- 3. Some USB on PC may not meet the need of Power for Paperlike HD. Paperlike HD will halt when there is not enough power. Please reconnect the Paperlike HD to "5V 2A" USB charger.
4. If you meet problems while using, please refer the full user manual or email: support@dasung.com